



# Mastering The DVR

## Record a Program

Press the Guide button to view the program guide. Using the arrow keys, highlight the program you want to record, and press the Record button. If you are already watching the program, simply press the Record button to begin recording.

## Stop Recording

Press the Stop button and follow the on screen directions. If you started the recording using the Guide, recording will stop when the program is finished.

## Control a Live Program

If you want to pause what you are watching, press the pause button. Need to see something again? Press the skip back button. Ready to go back to live TV? Press the Live button.

## Watch a Recording

Press the List button to view your list of recorded programs. Use the arrow keys to select the recorded program you want to watch and press Play to start playing the recording.

## Delete a Recording

Press the List button. Use the arrow keys to select the recording you want to delete and follow the on screen directions.

## Experience DVR

Take control of your TV experience with the power of DVR! Record any TV program with the touch of a button and watch it whenever you want. Rewind live TV to see what you missed. Pause what you are watching for any interruption. Replay those hilariously funny parts as many times as you want.

## It's Easier Than Ever

We've made recording TV as easy as - well, actually watching TV. It's all there with a touch of a button. It doesn't matter what time your program actually airs. Record it and watch when it's convenient for you. With your DVR, YOU control the TV schedule.

# DVR User Guide



*A World of  
Entertainment in  
the Palm of Your Hand!*

**Arrows/Browse/Search/OK**  
Press to navigate through the guides, menu options or to make selections.

**Skip Back** - Skip backwards while watching a recording or while watching live TV.

**Rewind** - Rewind through parts of a recording. Press multiple times to rewind faster.

**Stop** - Stop watching a recording or stop a recording that is in progress.

**Pause** - Pause the program you are currently watching. While paused, the Fast-Forward button will play the program frame by frame in slow motion.

**Guide** - Access the program Guide. Press a second time for alternate view.

**Swap\*** - Toggles the audio between the two Picture in Picture windows.



**List** - Press to see your list of recorded programs. Press it again to see what is scheduled to be recorded.

**Live** - Select to return to the current part of a live broadcast.

**Skip Forward** - Skip forward while watching a recording or live TV.

**Fast Forward** - Fast forward through parts of a recording. Press multiple times to go forward faster.

**Play** - Begin or resume watching a recording. Also display/remove the status bar.

**Record** - Record a program.

**PIP\*** - Activates the Picture in Picture functionality. Press twice to deactivate the Picture in Picture.

**Move\*** - Adjusts the location of the second Picture in Picture window.

**CH+/-\*** - Changes the channel of the programming in the second Picture in Picture window.



\* Only Available with certain STB models.